



Installation Manual of HP 9000/10000 Bulk Ink System

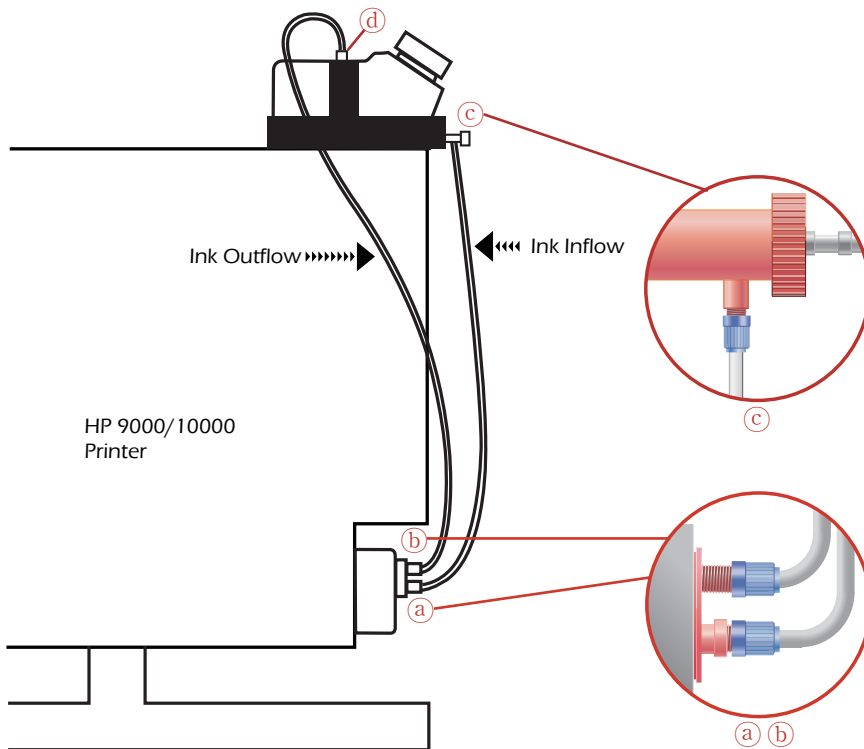


How to install the system

1. Plug each cartridge in its corresponding slots.
2. Remove the tape of the adhesive on the bottom of each bottle unit and locate them on a preferable position. (On the top of each side of printer.)
3. Connect ink tubing as the following instruction.


1. How to connect a ink tubing on (a), (b) and (c) location.

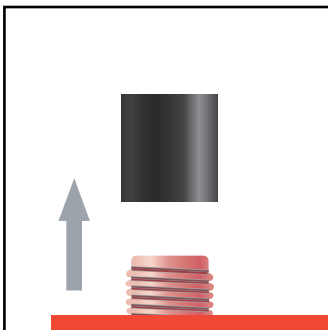

- ① Remove the black cover.

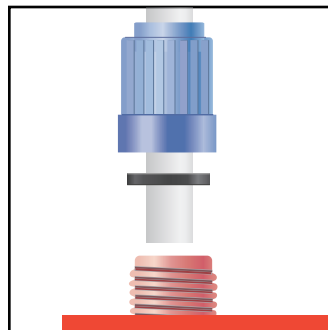


- ② Fit a ink tube with a blue connector and O-ring.

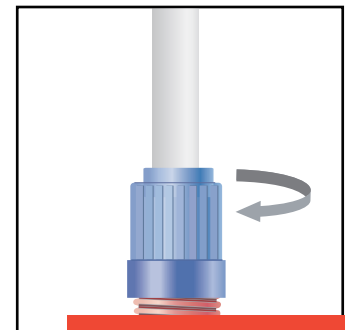


- ③ Place and push a ink tube to the end and fasten the connector.

2. How to connect a ink tubing on (d) location.

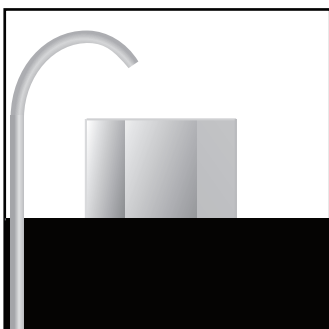

- ① Cut ink tube with proper length.

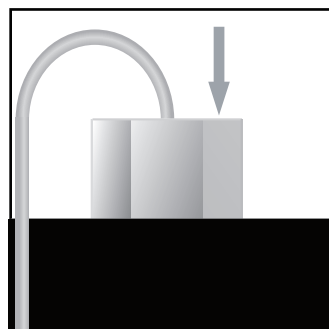

- ② Place and push it in the hole of a nut on the top of bottle.